


# FASTRAK™



## For Adhesive (Permanent):

1. Select a desired location for your **FastRak**.
2. Clean mounting surface by removing oil, dust, etc.
3. Carefully remove protective covering from the adhesive strip on the back edge of the **FastRak**.
4. Avoid touching the adhesive surface.
5. Position the **FastRak** horizontally and apply pressure evenly to the full width of the **FastRak**.

**Caution:** Do not remove the **FASTRAK** after initial adhesive contact is made. The adhesive may lose tack strength and/or mounting surface may be damaged.

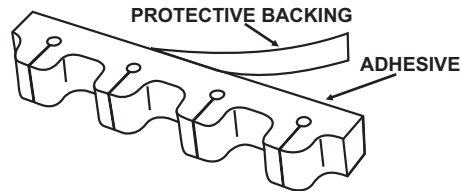

## For Magnetic (Moveable):

1. Wipe dust, etc. from grooved side of magnetic strip.
2. Carefully remove protective covering from the adhesive strip on the back edge of the **FastRak**.
3. Avoid touching the adhesive surface.
4. Carefully position the grooved side of the magnetic strip onto the exposed adhesive strip on the back edge of the **FastRak**.
5. Apply pressure evenly along the full width of the magnetic strip.
6. Allow the adhesive/magnet to set for 8/10 hours before use.
7. The **FastRak** can be positioned on any ferrous (steel) metal surface.

